 


Ratchet Rake's Snow Edge Option Comparison:

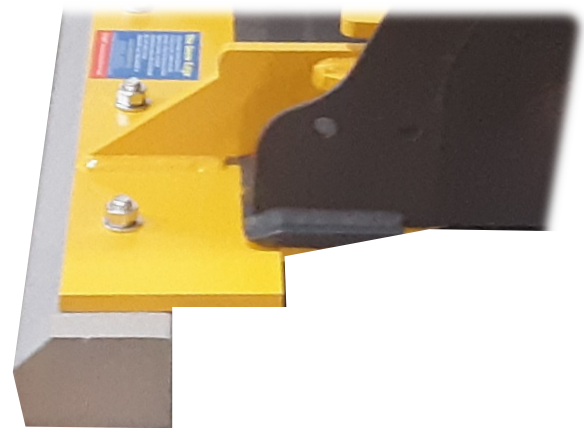

Pusher Edge:

- Used with loader bucket tilted at 45 degree angle.
- The sharper Pusher Edge is better suited for scraping up packed snow.
- Larger pushing capacity (The top of the tilted bucket is elevated up to 10" higher than the height of many small tractor plows or pusher attachments).



Standard Edge:

- Used with the bucket tilted or parallel to the driveway.
- The standard edge is better suited for floating over uneven surfaces: concrete joints, brick pavers, grass, and gravel.
- Is better suited for back dragging snow away from garage doors or other obstacles.

 
The plastic **52" Pusher Edge** and **48" & 54" Standard Edge** are both compatible with the 48" clamp on mounting fixture.

The plastic **62" Pusher Edge** and **60" Standard Edge** are both compatible with the 60" clamp on mounting fixture.


The **Pusher** and **Standard** plastic edges will not leave marks on concrete (like black rubber can) and are both rated for 32 hours of use.

Snow Edge Information Sheet Ratchet Rake LLC


Compatibility : Rated for machines up to 60 hp

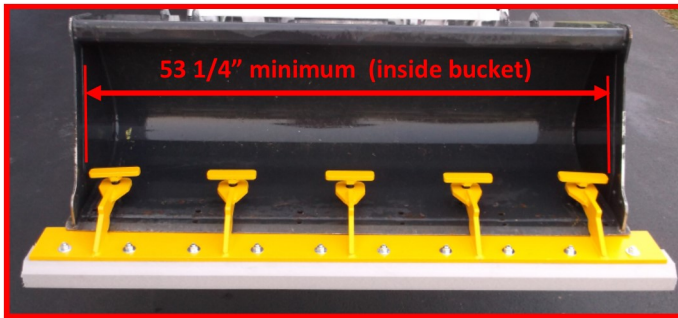


60 inch model

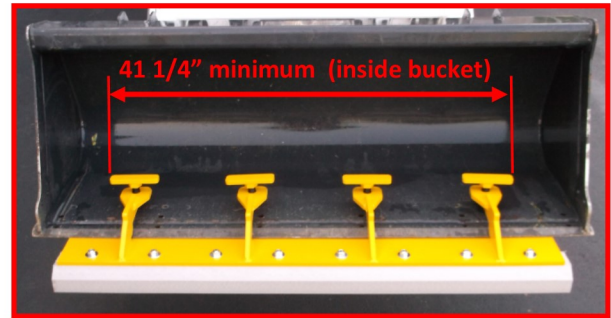 

48 inch model

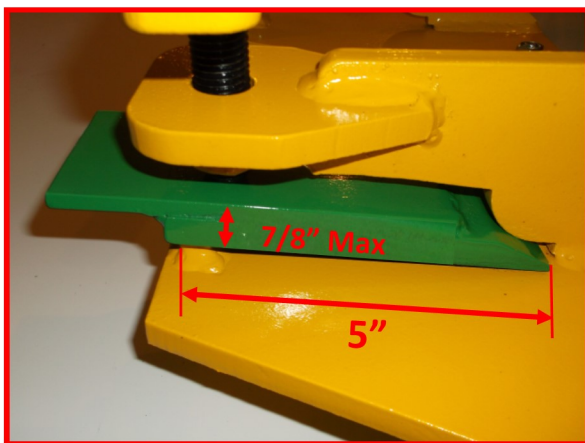 


 The thickness of the buckets edge must be no more than 7/8"(measured in 5" from the tip).

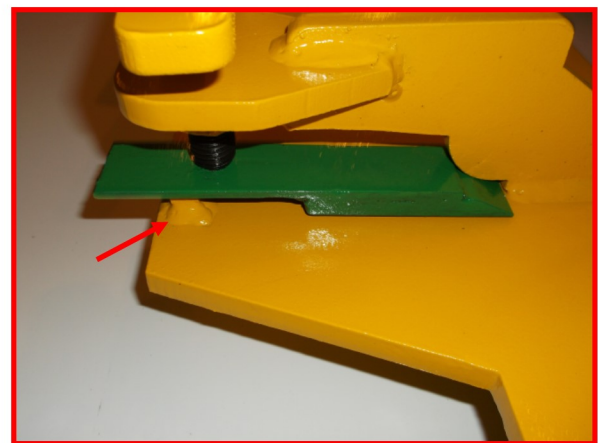

An elevated gripping block provides support to ensure the threaded clamp will not damage lighter duty buckets.

 
Unique Design Features:

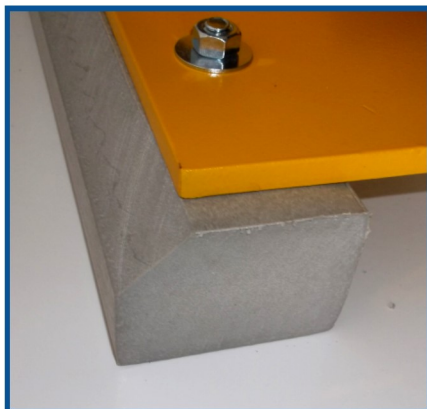

Proprietary 100% synthetic edge last up to 32 hours & will not become brittle even at arctic temperatures.



 Custom fabricated anti-spin washers & carriage bolts slide into the T-slots of the replacement edge and ensure that the hex nuts can never be over tightened.

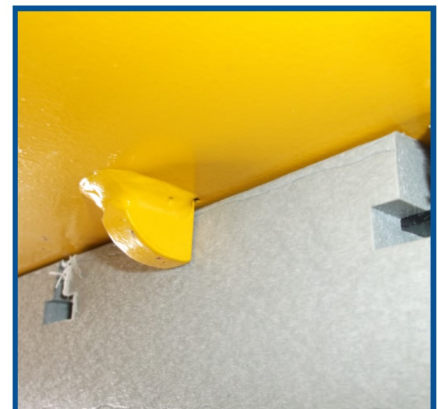

A series of cleats project downward behind the edge and provide additional support.

Installation & Maintenance:



Position the edge of the loader bucket in to the device as shown. Tighten the clamps down on the top of the bucket's surface.



Most tractor operators can adequately tighten and loosen the clamps by hand, however an 8 inch long piece of 1 1/4" PVC pipe can slip over the end of the clamps to lessen the effort required.



Lubricate the clamp threads with a thin oil at the beginning and end of each winter season. Check the replacement edge connection bolts (tighten if necessary).

Operating Recommendations & **Safety Precautions**

- The Snow Edge is intended for pushing, scraping, scooping, and dumping snow and sleet with a loader bucket while protecting concrete, asphalt, or brick paver surfaces.
- Position the bottom of the bucket parallel to the work surface or tipped forward to ensure the heel of the bucket does not drag.
- Be aware of stationary objects and obstacles that may become hidden before the snow falls.**
- Avoid Death: never walk underneath a raised loader bucket!**